

To access TFET AFS space from the B1500A:

The B1500A upon startup will ask for credentials; simply enter one's netid and password where indicated and make sure the Realm is under CRC (Drop-down menu). If the machine is already up and running, the protocol for connecting a different user to the shared TFET AFS folder is the same as disconnecting a user. Click Start -> Programs -> Kerberos -> Network ID and Manager. This will open a window, in the top left click either 'add credentials' to begin or 'destroy credentials' to end.

The TFET AFS space can be accessed remotely and the data from the B1500A can be saved directly into the TFET folder.